


STAKE ONLY IF REQUIRED. TWO 2" ϕ . STAKES AT LEAST 2" OUTSIDE OF THE ROOT BALL AND SET 6" MIN. INTO UNDISTURBED SOIL. CUT OFF BELOW FIRST MAJOR BRANCH OR PLACE OUTSIDE OF CANOPY.

AMENDED BACKFILL MIXTURE

NO DEEPER THAN THE DEPTH OF THE CONTAINER AND WALLS OF UNDISTURBED SOIL SHOULD BE ROUGH AND SLOPING.

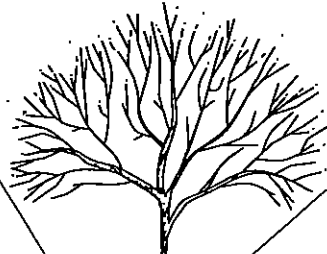

TREE TIES

LOCATE BUD UNION ABOVE GRADE AND PLACE ROOT BALL ON UNDISTURBED SOIL.


FILL THE EXCAVATED HOLE WITH WATER TO TEST THE DRAINAGE. IF WATER IS STILL STANDING AFTER 24 HOURS, BORE A 6" ϕ HOLE 1' TO 3' DEEP THROUGH HARDPAN.

EXCAVATE 3 TO 5 TIMES THE WIDTH OF THE ROOT BALL.

TREE

AMENDED BACKFILL MIXTURE

NO DEEPER THAN THE DEPTH OF THE CONTAINER AND WALLS OF UNDISTURBED SOIL SHOULD BE ROUGH AND SLOPING.

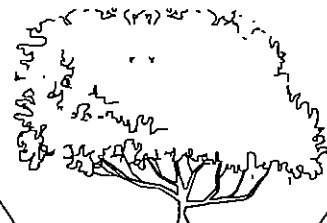

BACKFILL MIXTURE

FINISH GRADE

EXCAVATE 3 TO 5 TIMES THE WIDTH OF THE ROOT BALL.

SHRUB

PLANTING DETAIL

NOT TO SCALE

LS-14

071003

